



PATIO DOOR FOOT BOLT INSTALLATION INSTRUCTIONS

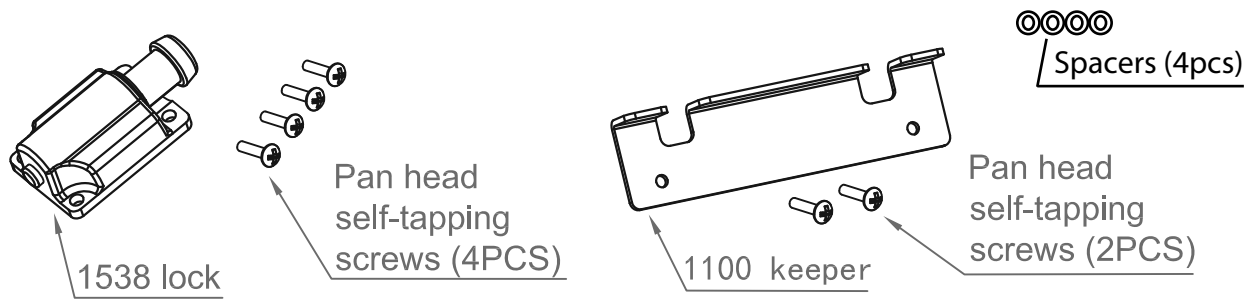

1538 installation method:

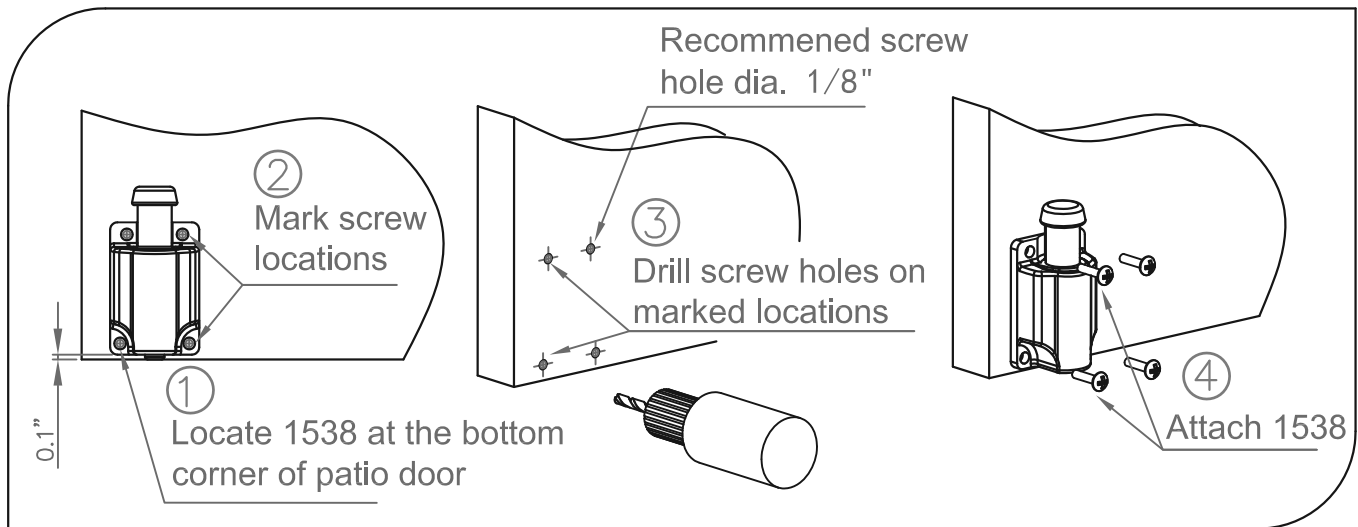

1100 installation method:

